

# **The Gun Master Against Pirate King**

## **Product Specification**

(Before operating, please read the product manual in detail)

## 一、Product specification

External size;1380mm

Height; 60kg

Power; 0~60Hz)

Power consumption; 165W

Token specification; diameter 22mm~27mm(adjustable)

Storage tank ; 25L

## 二、 Random accessories :

Name	Number	Unit	Noting
instruction	1	PCS	A4
Key	2	PCS	
bead	1	KG	
Three flat power cord	1	PCS	

## 三、 Game Brief Introduction

1. This association is a kind of game with water injection video which geared to the broad masses of children. The theme of this game is to beat the king of the pirates, the fuselage modeling is novel with bright light, especially suitable for kids who are 3 years old. Also, this game can help children to practice their ability of thinking and reacting to things. The machine adjusted in double language, including; English and Chinese. And it has two versions; refund Gashapon, refund lottery tickets. Ultra-quiet water pump and the upper and lower water level warning, scence and music perfect cooperate pleasure can experience realistic shot.

2. The game is divided into three levels, the first level pirate strikes, you need to put off all fire, and then you can back into the second pass survival, beat pirates to save friends, only achieve a certain score can enter the third battle, at last you win pirate, the game is over. Also, you have chance to go the list after you win three levels.

#### 四. Operating Instruction

1. Keep switching game on picture. Put tokens or beads, pat start button to enter the first level—pirate attack. The box in the level of graphics will continuously light fire by pirates, as long as player oscillating water gun to make water into the flame center screen can extinguish the fire, at this time, the system can increase score, during the process, water gun will landing at any time, but if you shot gun, the speed of fire will increase. With the fastest speed went out all fire in the screen, you can enter the second level.(figure1).



(图1)

2. Enter the second counter survival, the frame will appear constantly pirates and

hostages, as long as water gun shot pirates, you can get score, if shot hostage or pirate will be penalized. Accumulated a certain score, namely into the third level. (Figure2)



(图2)

3. Back into the third pass survival, it appears a real pirate captain, you must win pirate captain before the end of game time, it means you passed all levels. ( Figure 3)



(图3)

4. Time over or game end, input user name will be shown in pictures, enter the name and after the confirmation result statistics and displays a brilliant votes, after the refund


shows, it shows ranked in the top five. (Figure 4)



(图 4)

#### 四. Game Setting;

1. Open the chassis front door and saw (figure5) button, switch up and down button, adjust the parameters of controller start button to determine the settings press “set” button to enter in the normal game main menu( figure 6).

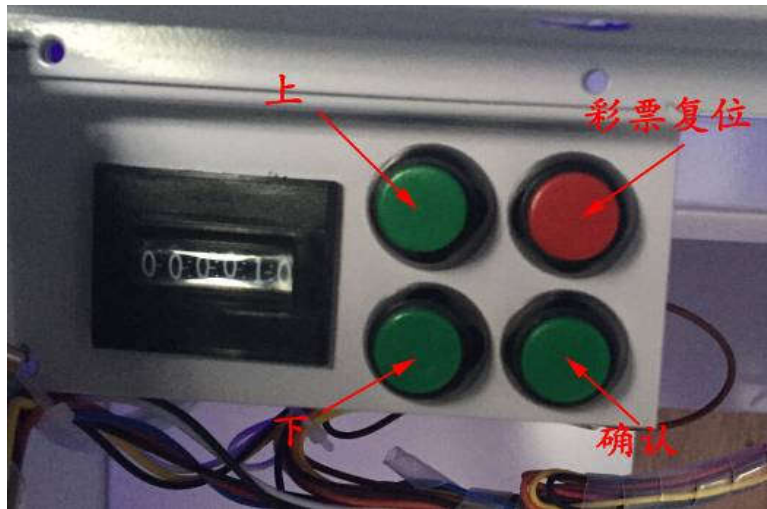

(图 5)



(图 6)

2. Select set into the Settings screen (figure 7), the following table.

Setting name	parameter	unit	noting
Coin number	0-9	coin	How many money to play a game, 0 to free mode
Time	1-9	minutes	Game time
music	Open close		if it has background music in standby mode
Refund rate	0-1000		How many points get a lottery ticket, beads
Currency exchange	0-50		How many beads get a coin(only for bead model)
Limit throw switch	close/open		If cast a few beads(only for bead model).

五. Checking account

1. Choose the audit into (figure 7) audit, options in the following table.



(图 7)

Cast coin model	
Total coin	Never remove
Total refund	Never remove
current coin	Can remove
Current ticket	can remove
Cast bead model	
Total coin	Never remove
Total cast bead	Never remove
Total return bead	Never remove
Current coin	can remove
Current cast bead	can remove
Current return bead	can remove

Note: currently, the machine is applicable only to pay model

## 六、 Language


1. After enter the language setting according to the control table "ok" button to enter.
2. Press the up, down keys to choose Chinese or English.
3. Set up after press "save" and "return".

## 七、 **Water Gun position calibration setting instruction**

Open the machine front door and hold the set button button "on" and boot, after being in the upper left corner half Angle reticle screen loosen, moving the center of the water gun water shooting accuracy, and press the button "on", then accuracy will move to the bottom right hand corner screen, reoccupy water gun shooting accuracy, the center of the water column and then press the button on the "" sure, calibration nozzle position after the completion of the machine directly enter the standby screen.

## 八、 Wiring



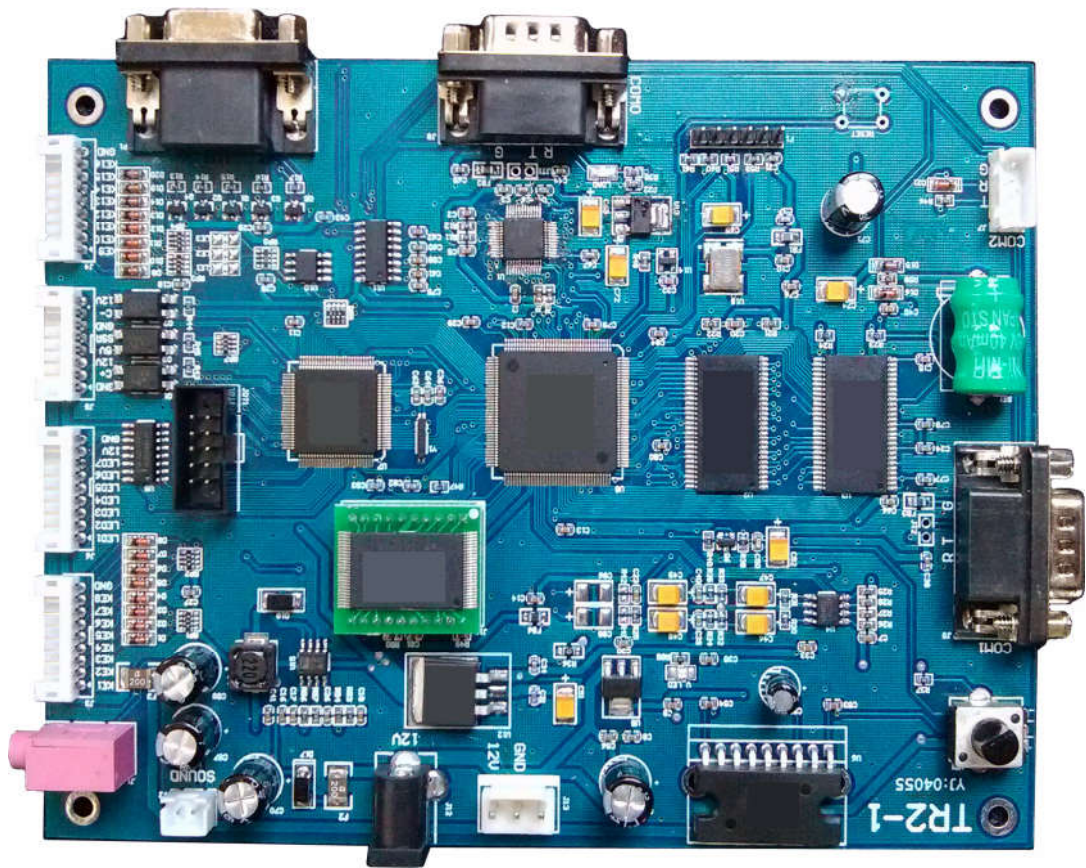

脚位说明:

Qualifyin g	Pin-out	Set
J3	KE1	Up
	KE2	Down
	KE3	
	KE4	
	KE5	Confirm
	KE6	C+ cast pearls
	KE7	
	GND	Ground wire
J6	LED1	SSR
	LED2	Light
	LED3	Light
	LED4	
	LED5	
	LED6	
	LED7	
	12V	+12V

	GND	Ground wire
J5	GND	Ground wire
	C+	Cast
	12V	12V
	5V	5V
	SSR	Refund SSR
	GND	Ground wire
	C-	Refund C-
	12V	+12V
J4	KE1	
	KE2	
	KE3	
	KE4	The up water level
	KE5	The down water level
	KE6	Shark
	KE7	Back bead, refund the repair button
	KE8	Set
	GND	Ground wire

### Attention;

1 1 screen beyond the maximum water level processing method

1.1 whether water tank is enough, such as not enough water. after level should exceed the height of the suction pump in the cabinet.

1.2 to see if the tank hose connected.

2 nozzle locator easy bad, it is suggested that not too strongly to rotate.

3 the water in the tank needs to change regularly, so as not to cause abnormal or

damaged nozzle work.